




x1

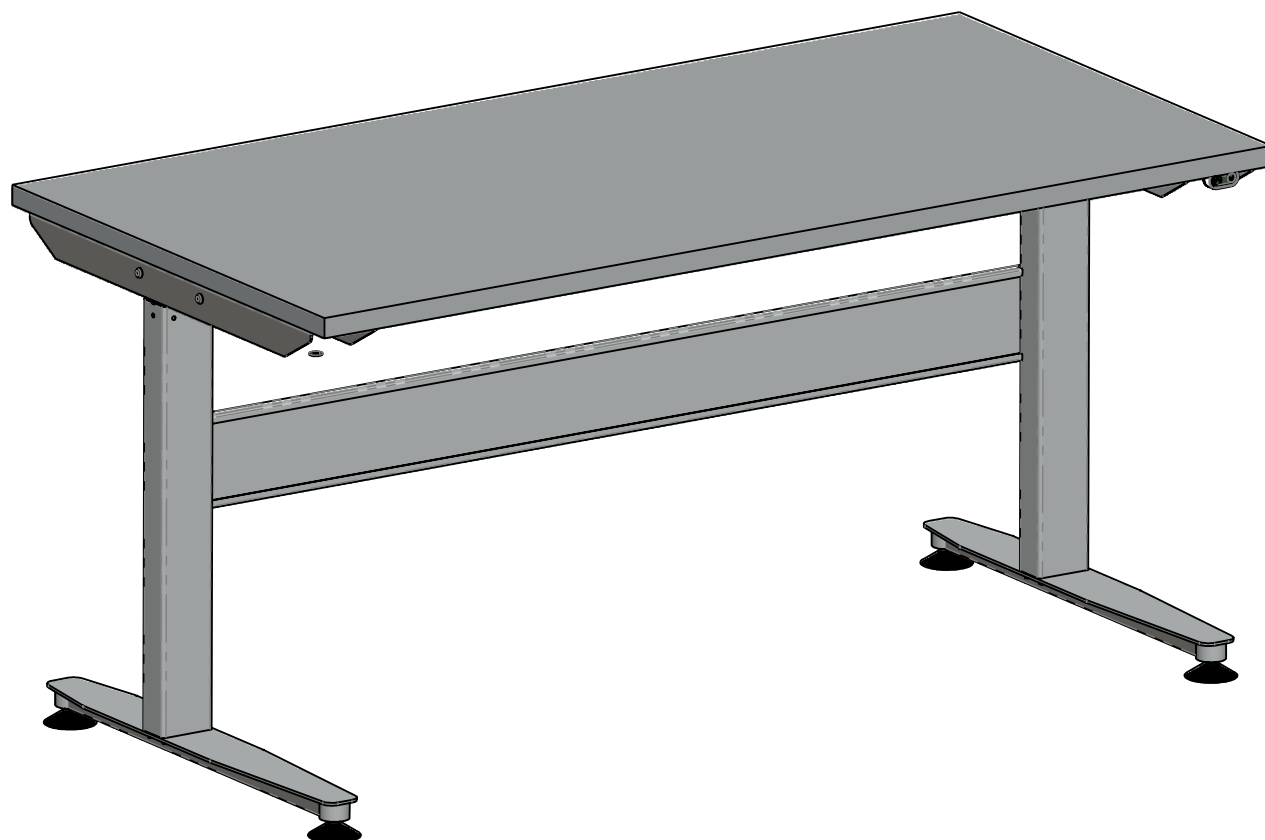

x1

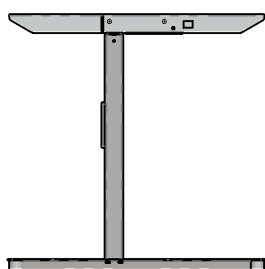

 x1



x1

L6-18



x4

HmM10



x4

TRLHC M8x10



x4

VBA 5x20



x4

D70 M10x20



x4

L8-22



x4

HM6 E



x2

TRLHC M6x16



x10




VBA 4x15




x2

4x-D70 10x20
4x-HmM10

1
x2

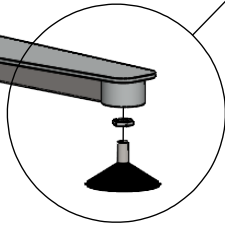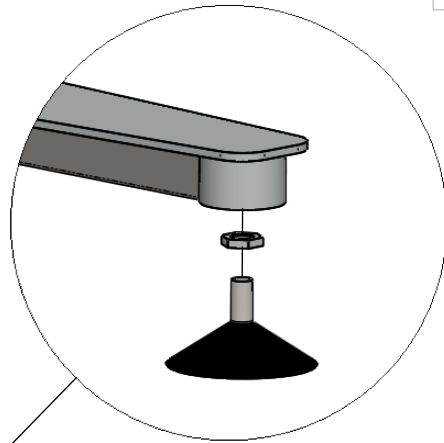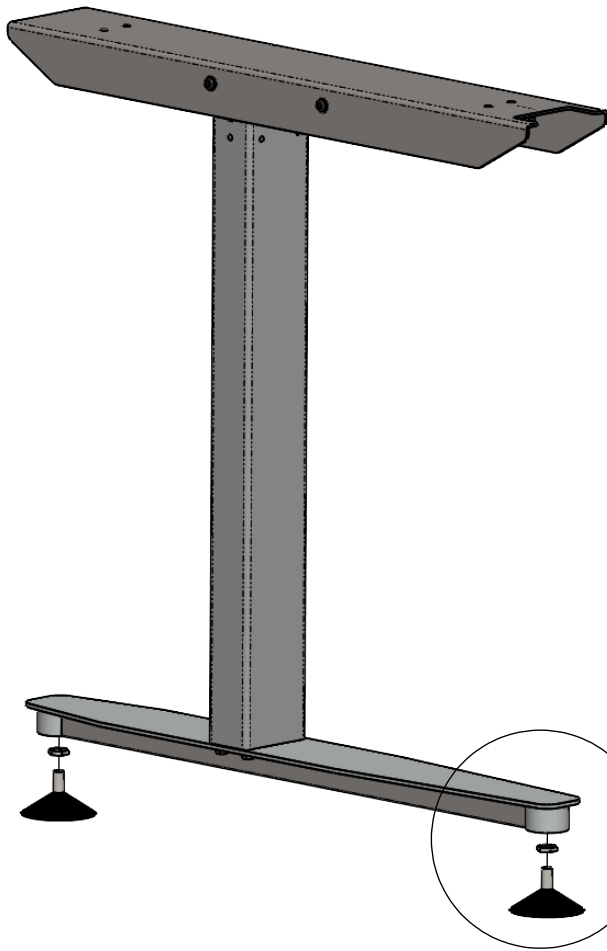

2

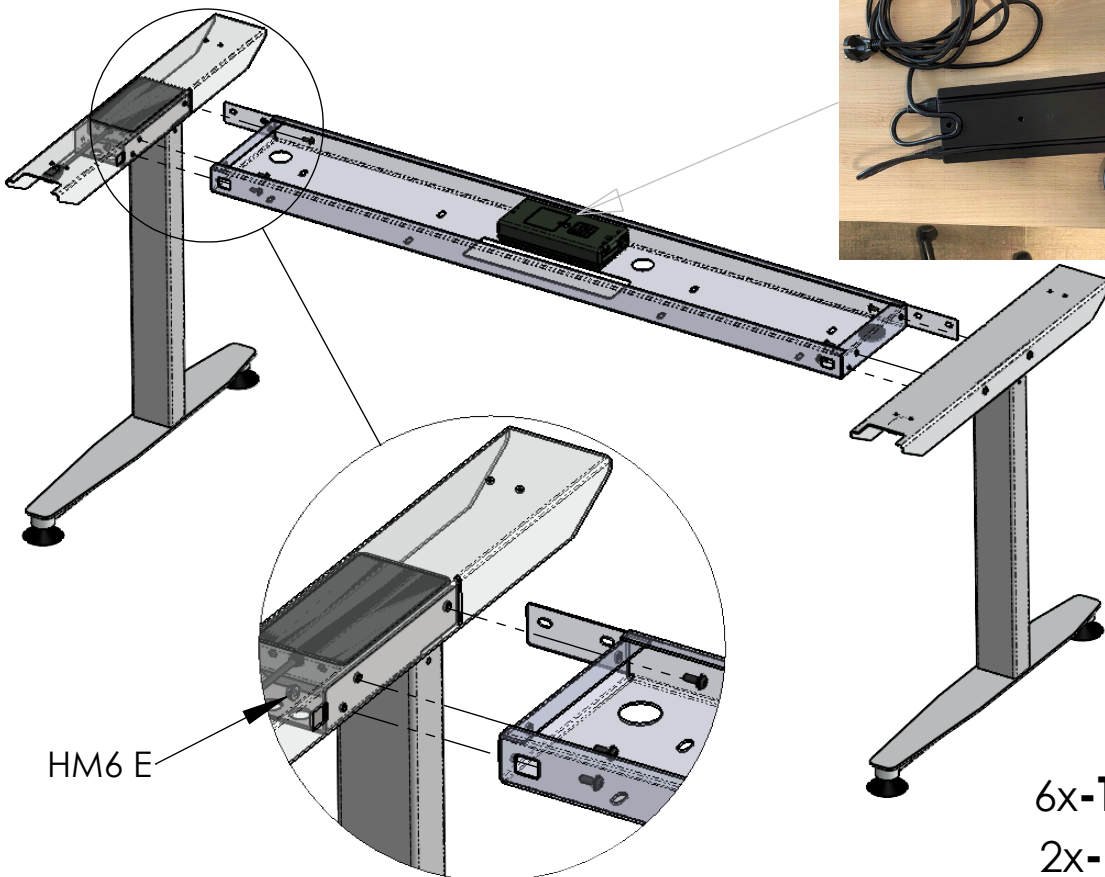


HM6 E

6x-TRLHC M6x16
2x-HM6 E


4x-TRLHC M8x10
4x-L8-22
4x-TRLHC M6x16


3

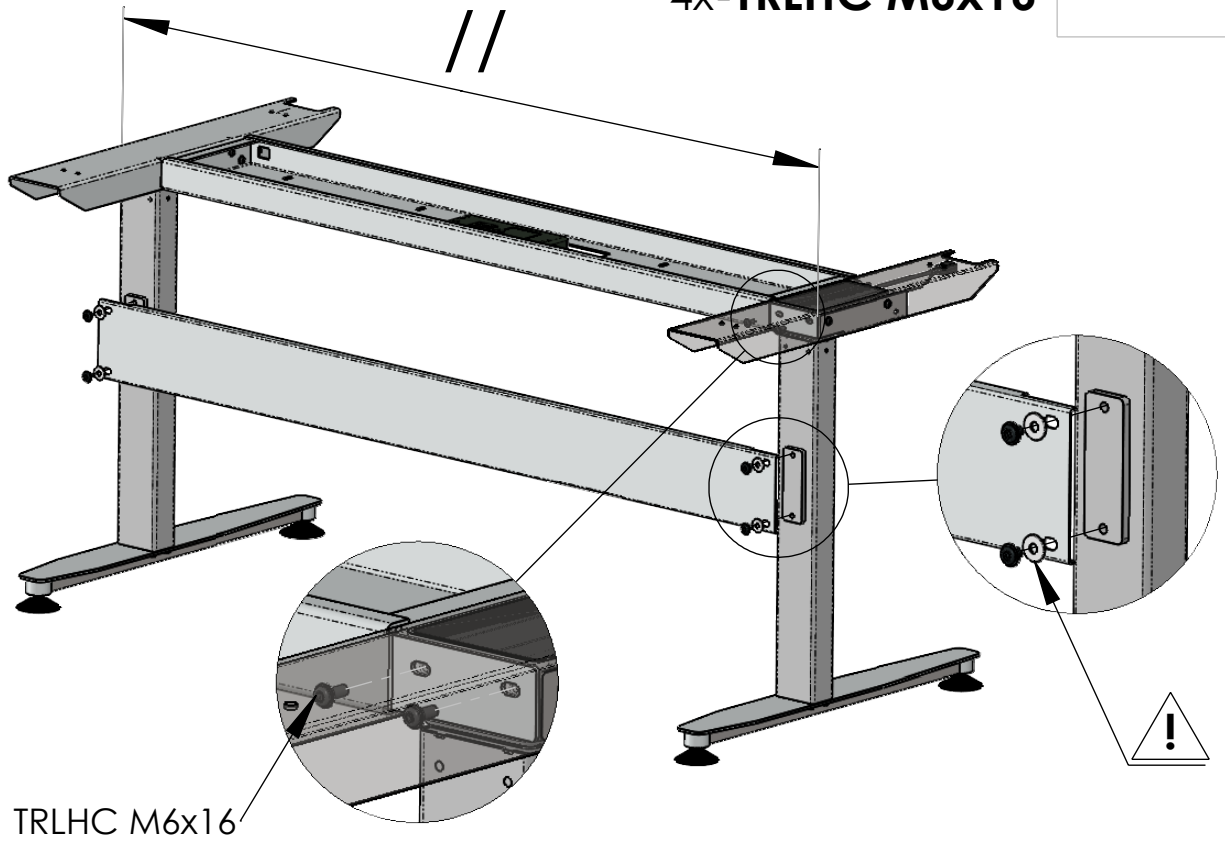

4x-VBA 5x20
4x-L6-18
2x-VBA 4x15

4

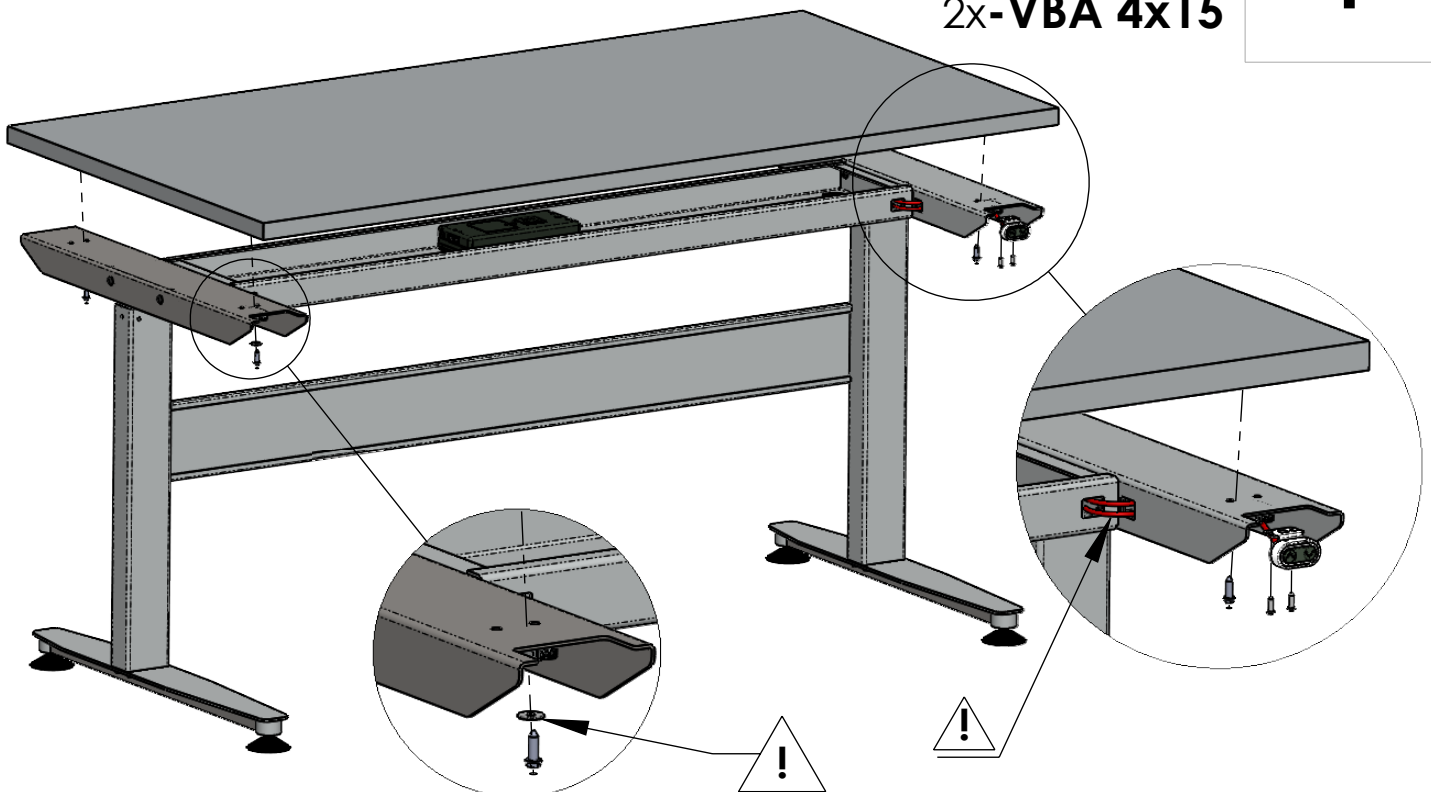

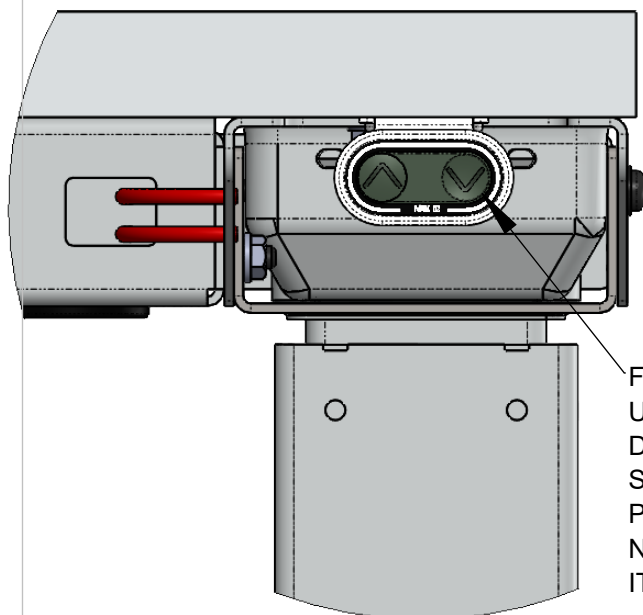

FR : Restez appuyé pour initialiser le poste

UK: Press and hold to initialise the workstation

DE: Zur Initialisierung des Arbeitsplatzes gedrückt halten

SP: Mantener pulsado para iniciar la partida

PT: Manter a pressão para iniciar o posto

NL: Ingedrukt houden voor de aanvangsinstelling van de werkpost

IT: Tenere premuto per inizializzare la postazione