


x1

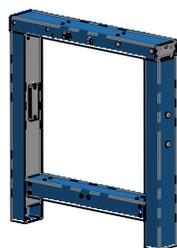

x1



x1



x1



x1

HM8-25 E



x4

HM8 E



x4

VBA 4-15



x2

TRLHC M6-16



x14

HM6 E



x2


VHBA 6-25



x4


4x-HM8-25 E
4x-HM8 E
14x-TRLHC M6-16
2x-HM6 E

1

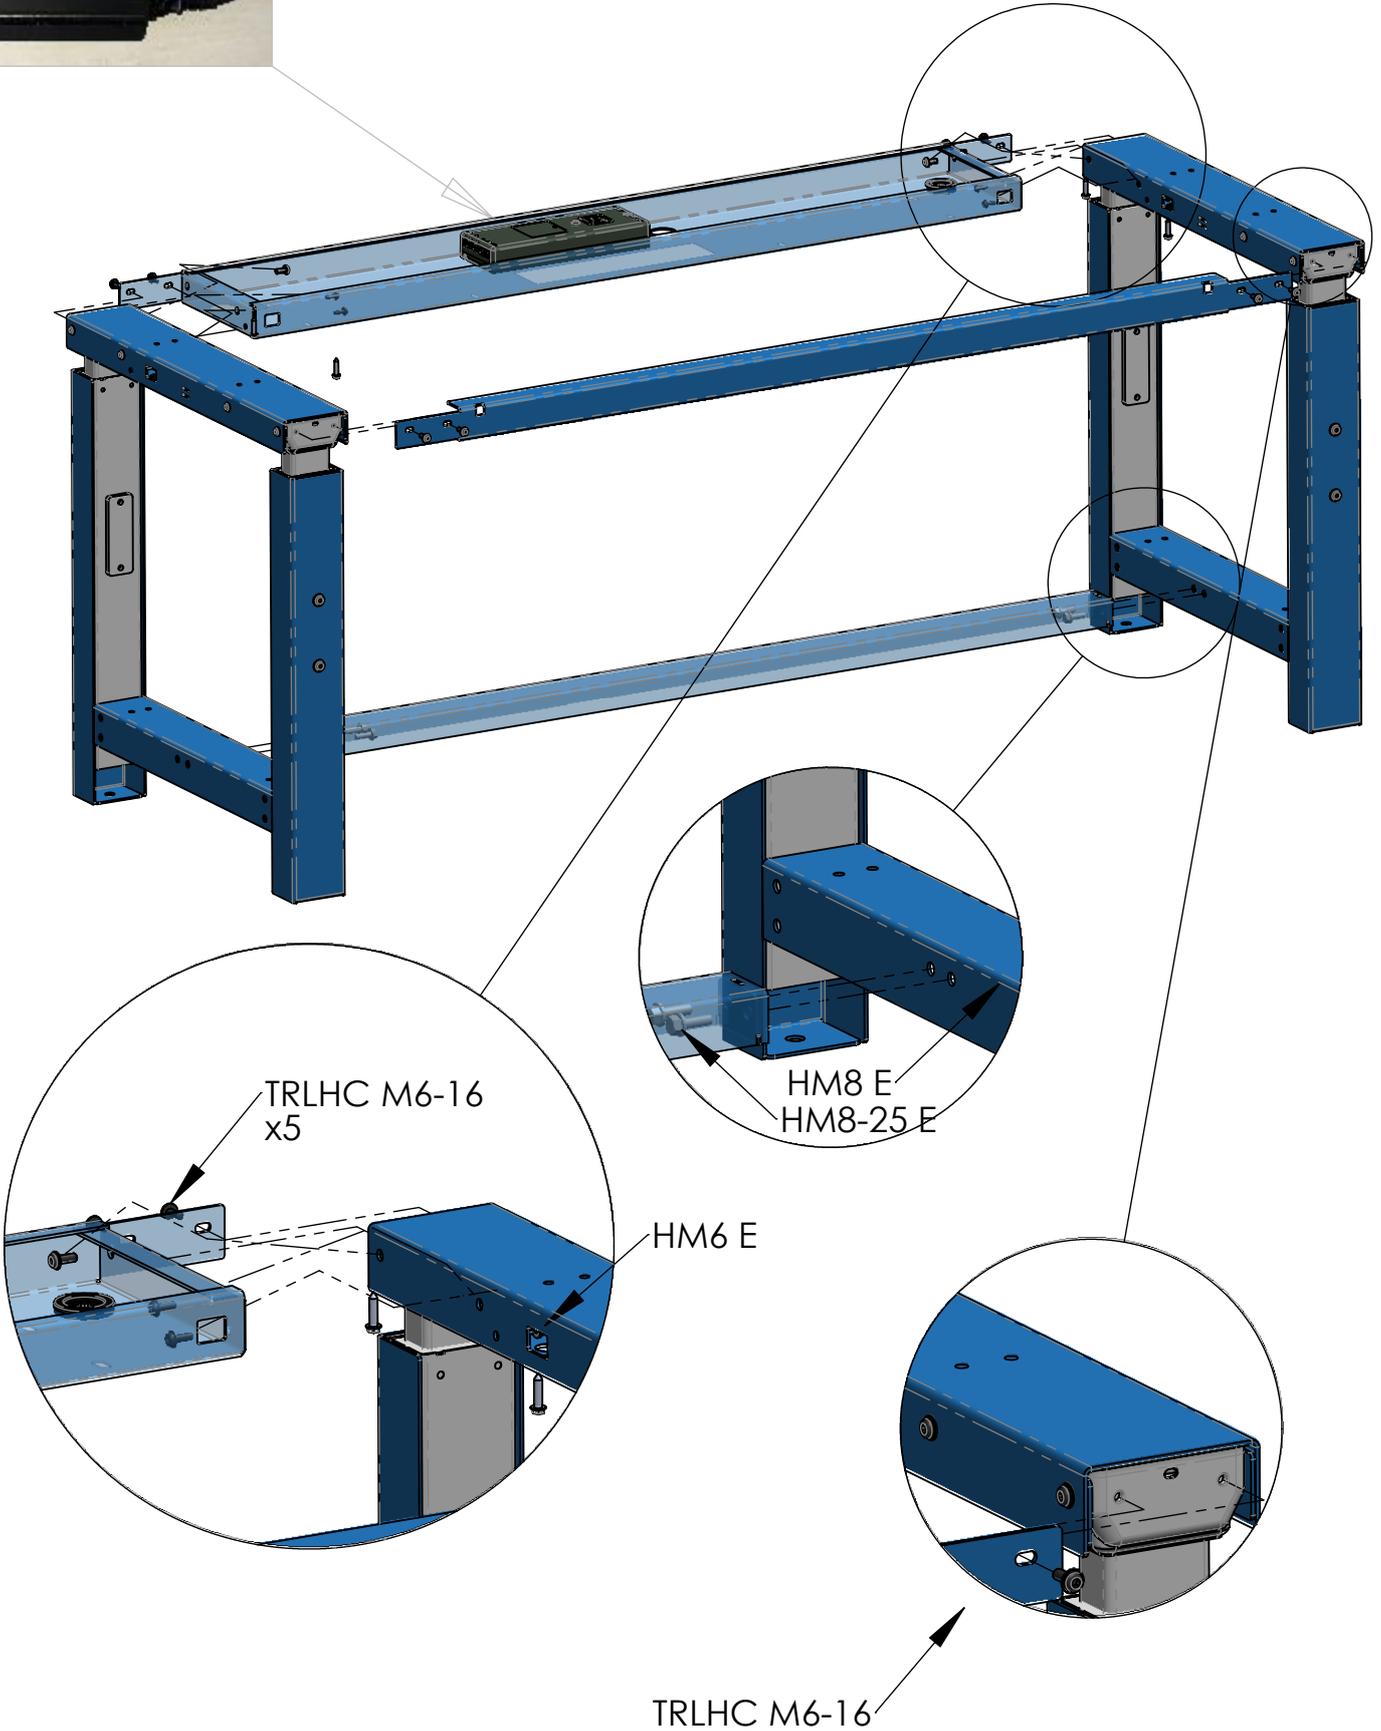

2x-VBA 4-15
4x-VHBA 6-25

2

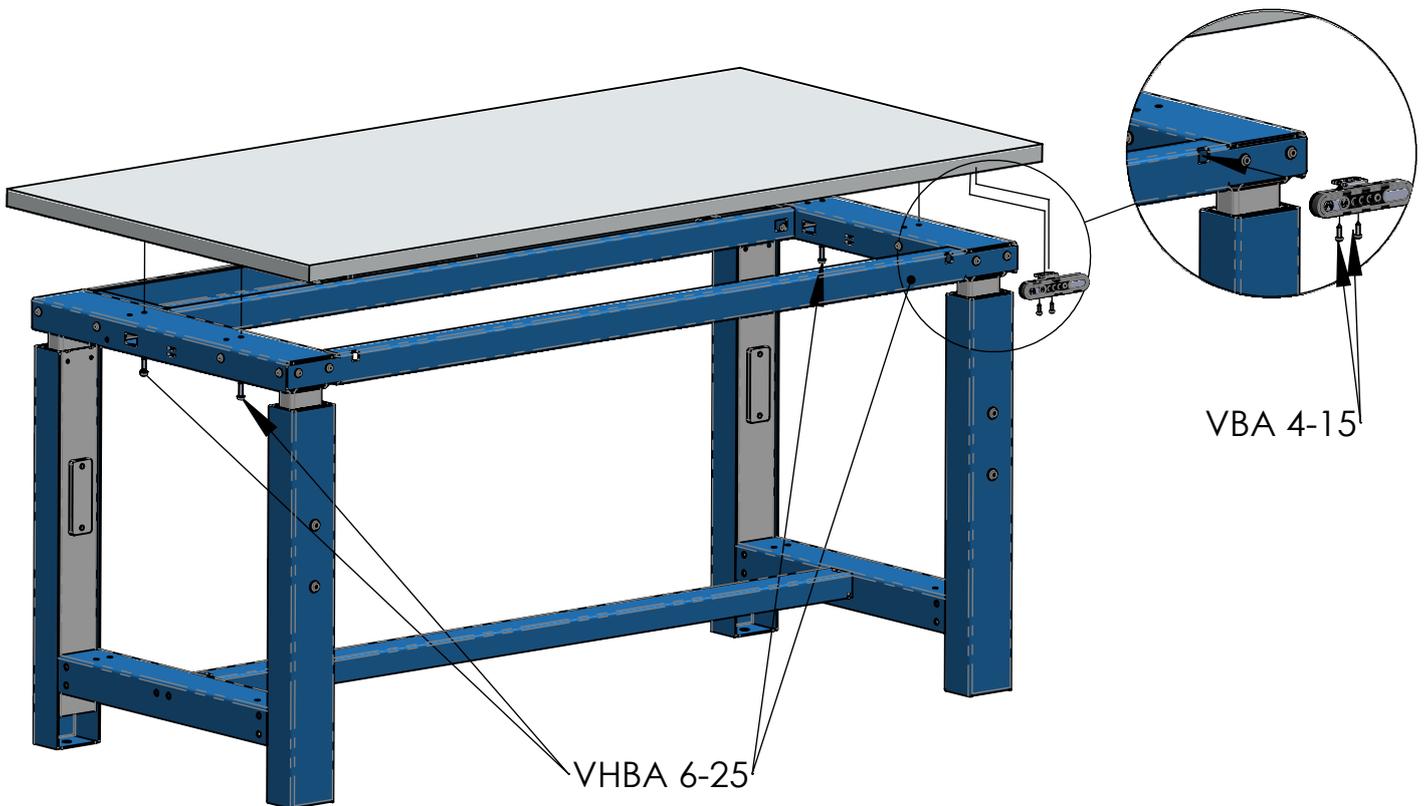

VBA 4-15

VHBA 6-25

3

FR : Restez appuyé pour initialiser le poste
UK: Press and hold to initialise the workstation
DE: Zur Initialisierung des Arbeitsplatzes gedrückt halten
SP: Mantener pulsado para iniciar la partida
PT: Manter a pressão para iniciar o posto
NL: Ingedrukt houden voor de aanvangsinstelling van de werkpost
IT: Tenere premuto per inizializzare la postazione

